
 
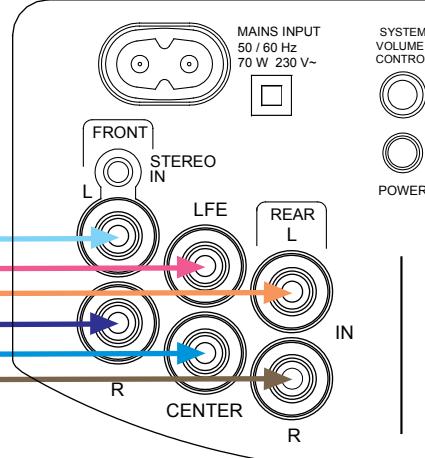


Stereo Inputs – Source Connection



 
Multichannel Inputs – Source Connection

STEP 1

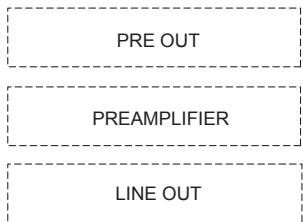


ON
OFF

STEP 2




ON
OFF

 STEP 3



ON
OFF

STEP 4

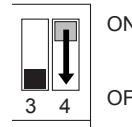


ON
OFF

- Connect a loudspeaker to the 'CENTER' output of the subwoofer and feed an 85 Hz test signal to the 'CENTER' input.


- Toggle the -180° phase switch 'ON' and 'OFF' and set it to the position which gives the lowest sound level at the listening position.

- Next toggle the -90° phase switch 'ON' and 'OFF', and again set it to the position which gives the lowest sound level.

- Finally, set the -180° phase switch to the opposite setting.

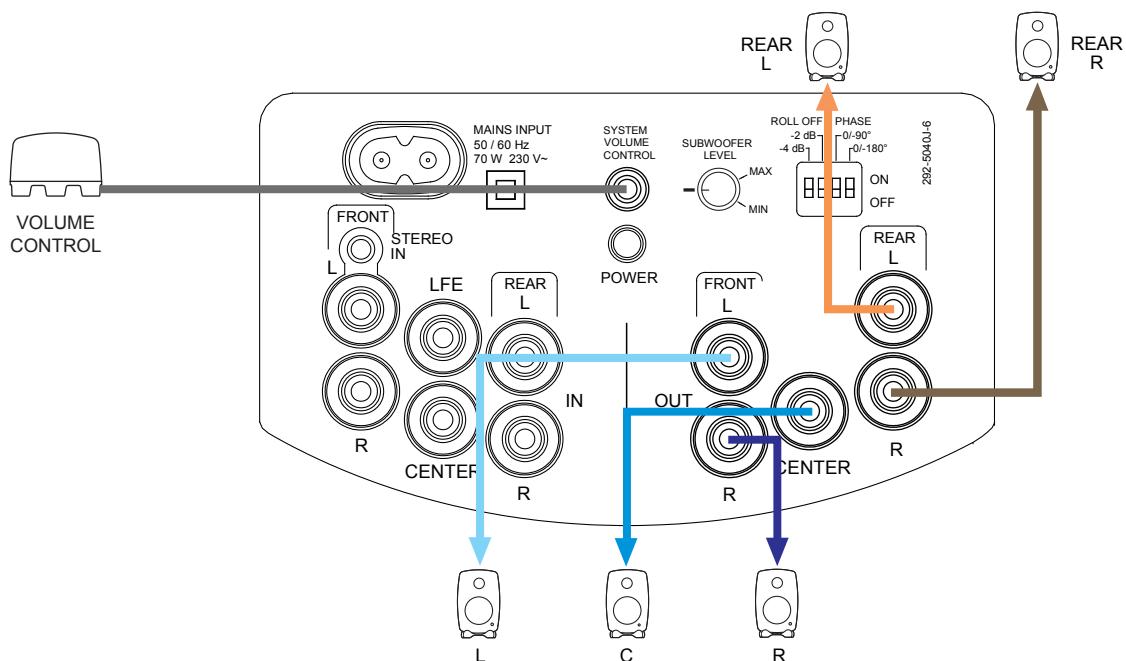


Loudspeaker & Volume Control Connections

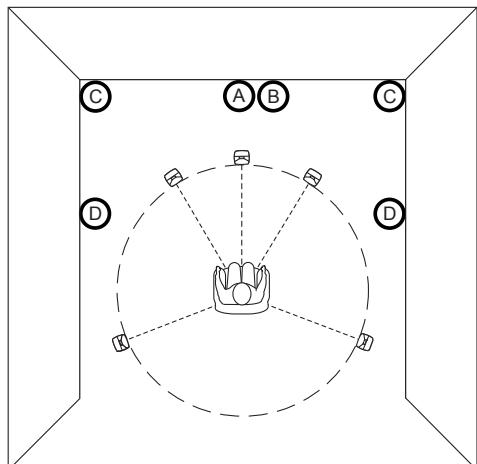

Suggested Tone Control Settings





(A) (B) (D)

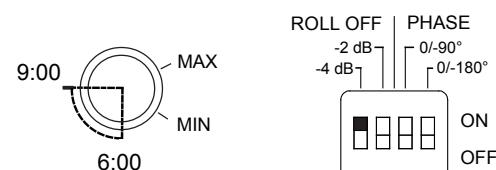

(C)

Subwoofer Placement

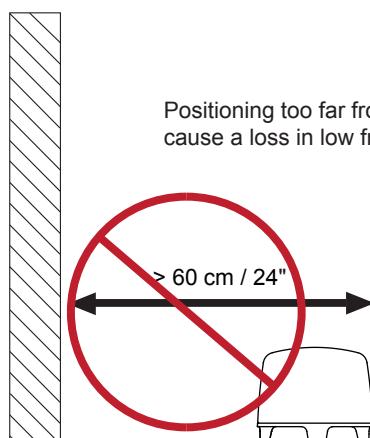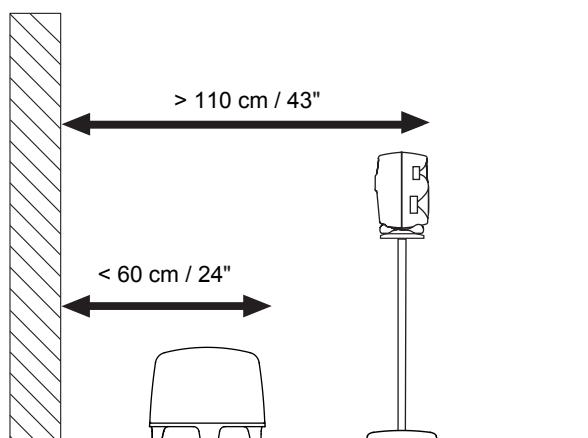

Positioning too far from the wall may cause a loss in low frequency response.

Distance from Front Wall