
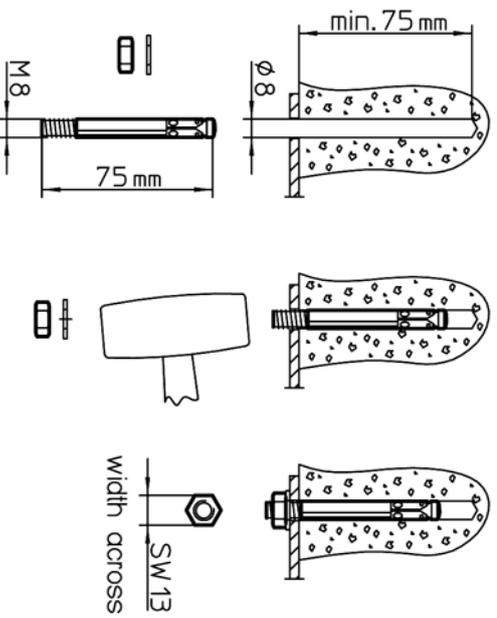


CEILING MOUNT for GENELEC 8020A, 8030A, 8040A, 8050A

max. load 15 kg, easy handling,
adjustable height, angle and direction


instruction manual

1. separate swivel joint from bracket

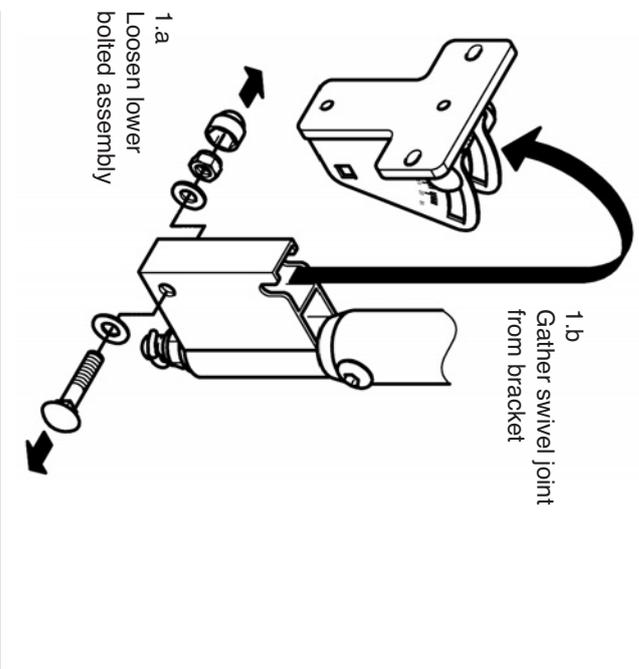


2. fasten ceiling plate


concrete wall - e.g.: steel-anchor-bolt M8x75
2.a
adjust and place ceiling plate, drill $\varnothing 8$, blow out holes

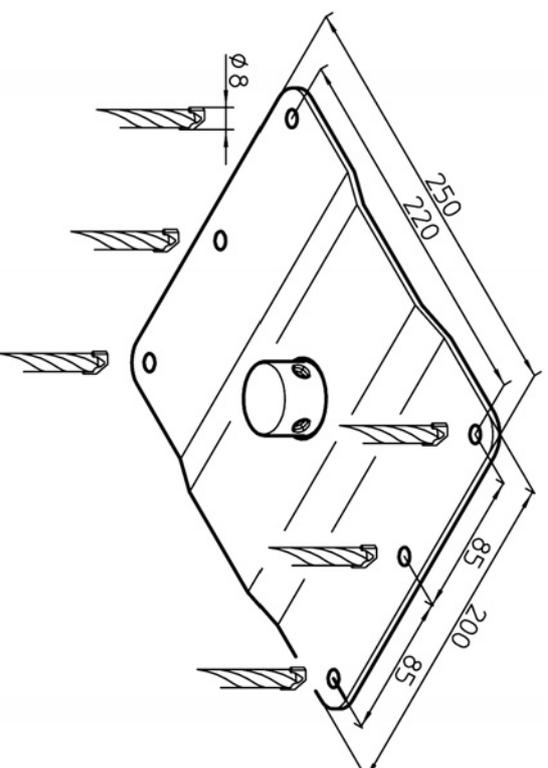

2.b
place anchors and washers, tighten hex nuts

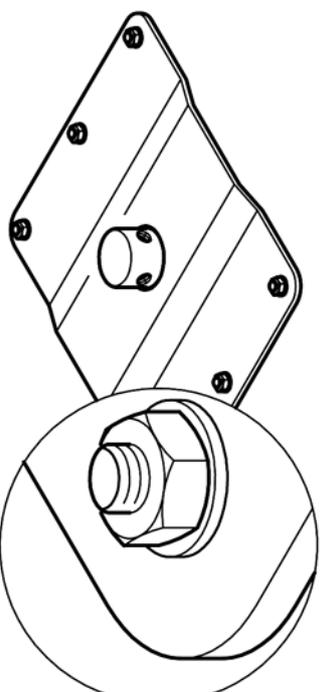

3. mount tube combination




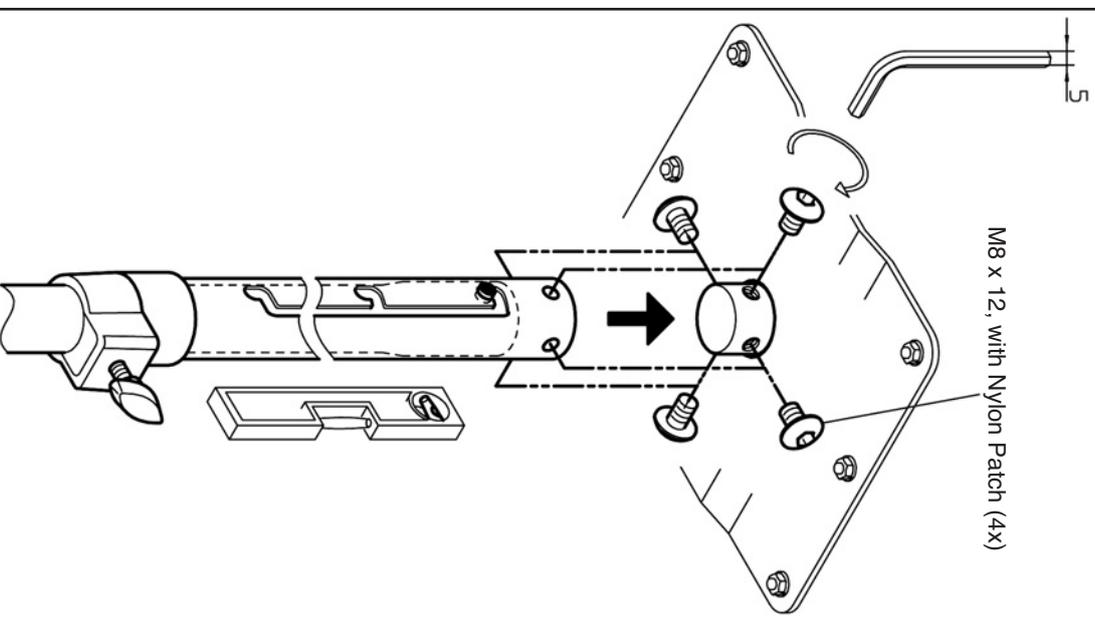


CEILING MOUNT for GENELEC 8020A, 8030A, 8040A, 8050A

max. load 15 kg, easy handling,
adjustable height, angle and direction


instruction manual

4. installation

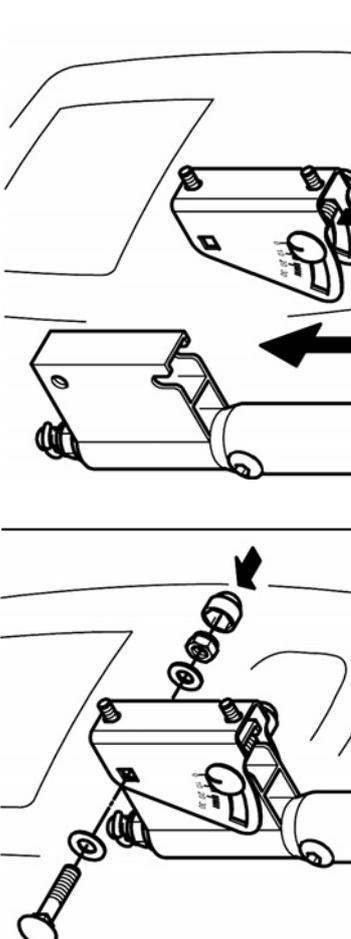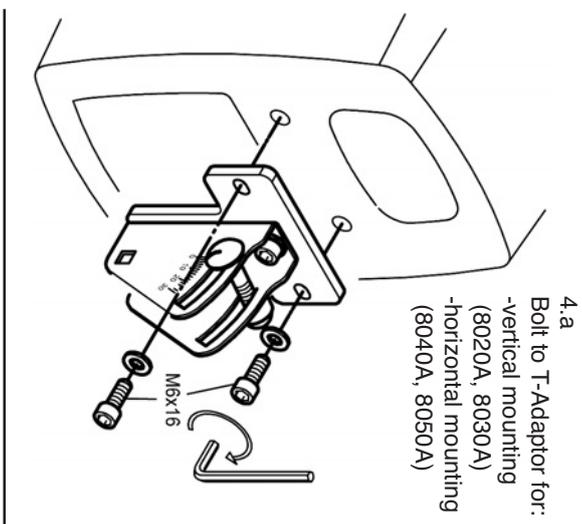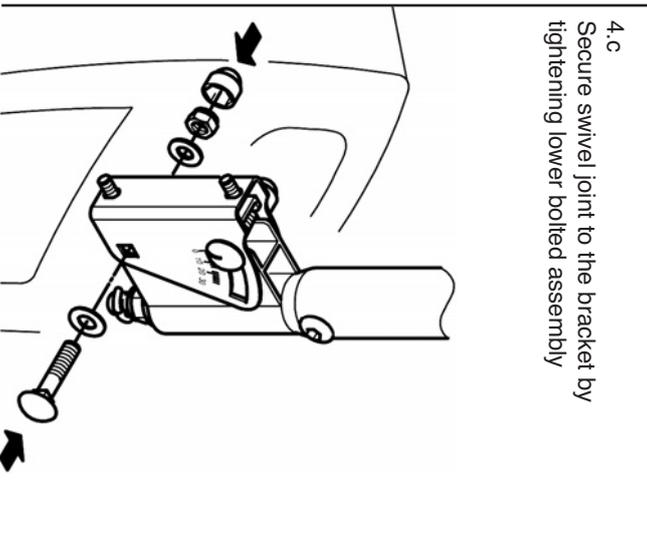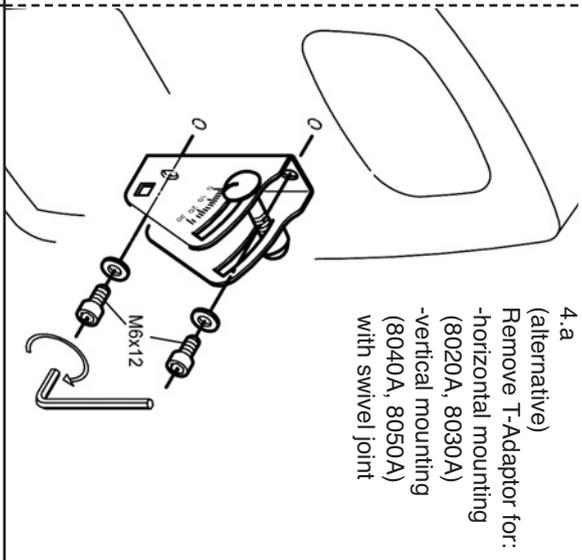
<p>4.a Bolt to T-Adaptor for: -vertical mounting (8020A, 8030A) -horizontal mounting (8040A, 8050A)</p> 	<p>4.a (alternative) Remove T-Adaptor for: -horizontal mounting (8020A, 8030A) -vertical mounting (8040A, 8050A) with swivel joint</p> 
<p>4.b Replace swivel joint into wall bracket (with mounted GENELEC)</p> 	<p>4.c Secure swivel joint to the bracket by tightening lower bolted assembly</p> 

5. settings


5.a - HEIGHT
Tubing can be adjusted into nine positions:
1-loosen clamping bolt
2-support the speaker
3-guide the bolt of the inner tube into 4-desired position (e.g.)
5-tighten clamping bolt

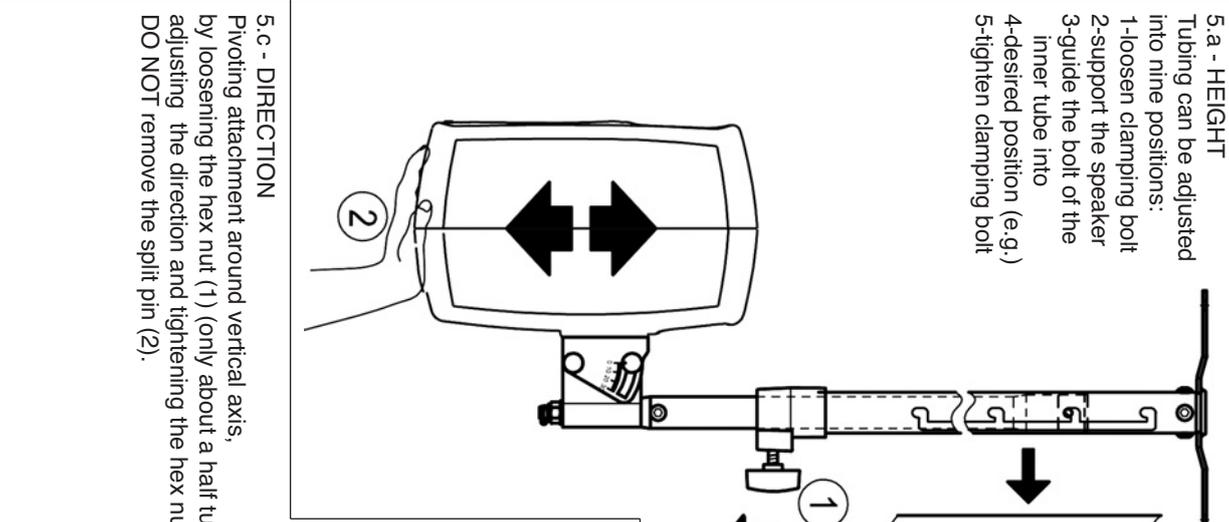

5.b - TILT ANGLE
Continuously adjustable up to 30°, by fixing the upper bolted assembly

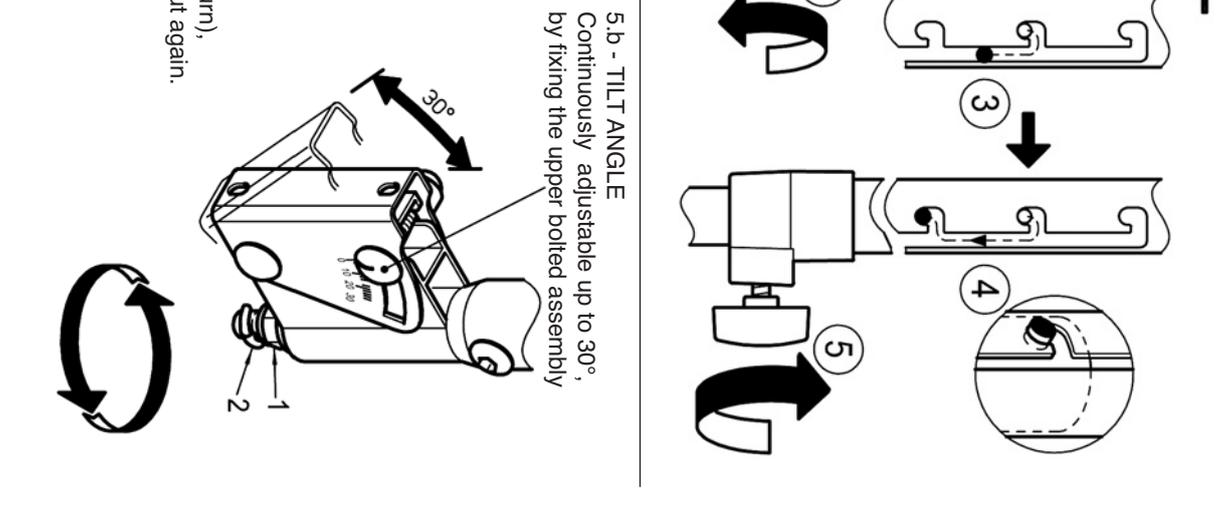

5.c - DIRECTION
Pivoting attachment around vertical axis, by loosening the hex nut (1) (only about a half turn), adjusting the direction and tightening the hex nut again. DO NOT remove the split pin (2).

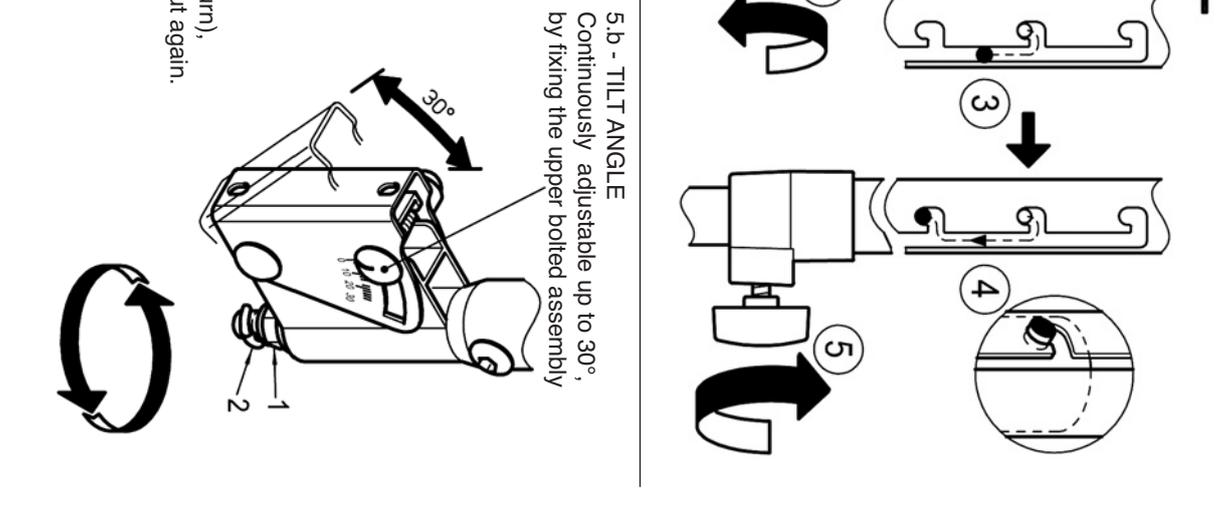


CEILING MOUNT for GENELEC 8020A, 8030A, 8040A, 8050A

max. load 15 kg, easy handling,
adjustable height, angle and direction

instruction manual

6. dimensions

ceiling plate: 20 x 25cm
Height: min.88 / max.:150 cm
9 steps to lock in place

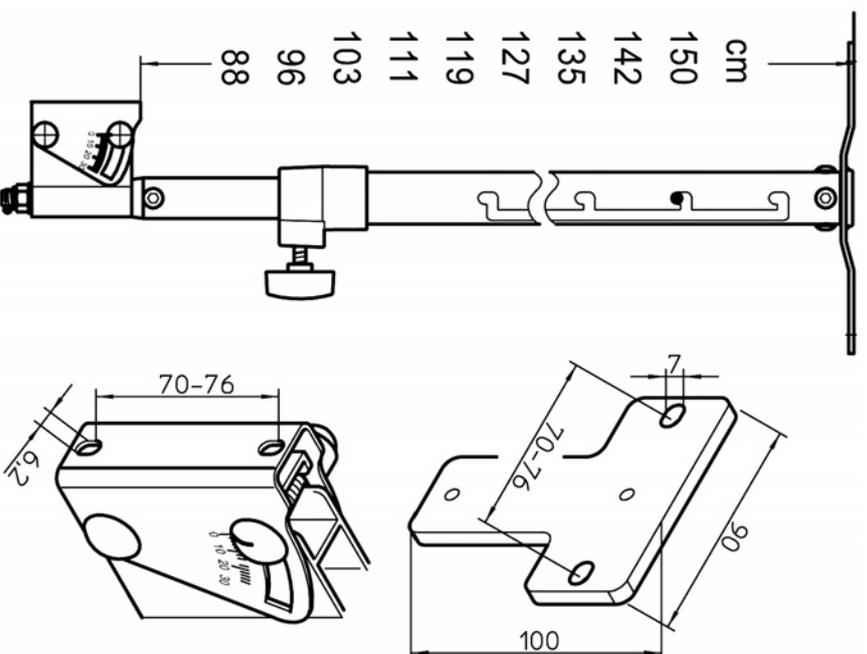

7. safety instructions

- Max. load capacity: 15 kg
- Use six anchors per ceiling bracket
- Not for use as a wall mount
- Choose a position and mounting method compliant with local building codes and regulations
- For use only by trained installers
- For use only at proper ceilings with adequate anchors (see 2)
- Not suitable for fragile ceilings. Beware of installed lines. In case ask an expert.
- Inspect the condition of the parts and the bolted assemblies regularly
- Make sure that the bolt of the inner tube is always hooked into the outer tube (s. 5.a.4)
- Do not remove the split pin (s. 5.c.2)
- For indoor use only

